Hello Kitty®

4 buttons credit card-MP3

Instruction Manual

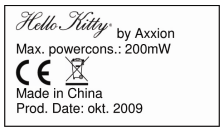

Appearance and buttons

Battery: The unit is power by 3.7v built-in lithium-ion battery, when power becomes low, LED will shine slowly, please charge in time.
Note: Never use the player under high temperature condition, don't throw it into fire.
Charge: connect the unit to the computer via the supplied USB cable. The player enters U-disk mode automatically. Exit the U-disk mode by clicking the icon in the box at the bottom right corner of the Windows screen. The player enters charging mode then.
WARNING: Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss. When participating in the traffic listening to an personal music player can make the listener less aware of potential dangers such as approaching cars.

Basic operation

●Power on/off

Power on: Press and hold ⏯ about 2~3s to power on.

Power off: Press and hold ⏯ about 2~3s to power off.

●Press PLAY shortly to play or pause music

●When pause; LED lights constantly; when play; LED flashes.

●Press "⏮/VOL-" shortly skip to previous song; press "⏭/VOL+" to skip to next song.

●Volume adjustment:

Press and hold ⏮/VOL- to decrease volume; press and hold ⏭ /VOL+ to increase volume

●Button R: press R to restore.

●Low power, LED shines slowly

●When charging via USB, LED shines, when full charge, LED lights constantly.

Using USB disk

The player is a standard USB Disk, supports systems over Windows2000 (it's unnecessary to install the driver), Mac OS X 10.3 and above, Linux 2.4.2 and above.

The player supports USB power supply and Suspend mode.

How to connect with PC

Power on the player, connect the unit to the computer via the supplied USB cable. The player enters U-disk mode automatically.

Trouble Shooting

No power supply	Make sure the player had been powered on.
No voice in the earphone	Make sure the volume is not at the status of 0, and the connection of the earphone has no problem. Make sure the cleanness of the earphone. Damaged MP3 may cause different degree of noises; it may even not be able to play music. Make sure the file is integrated
Cannot download music files normally	Check if the USB cable is broken, and it is connected with the player correctly. Check the drive program is installed properly. Check if there is enough memory

List of accessoiries:
1x Earphone
1x USB cable
1x 2,5 mm to 3,5 mm plug (for earphone connector)
1x Instruction manual

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)